


TAPE FACEMOUNTED MOSAICS INSTALLATION INTRUCTIONS




STEP 1: Using a V-notch trowel, apply the setting material firmly, comb horizontal, in one direction to establish proper depth.




STEP 2: Apply sheet into bed (tape side up) using light even pressure to establish contact and eliminate any voids.

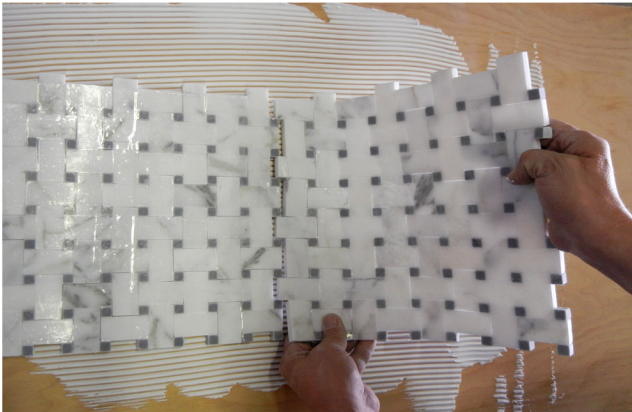


STEP 3: Apply each subsequent sheet so grout joints line up, dropping sheet from the top and not sliding it into each other.

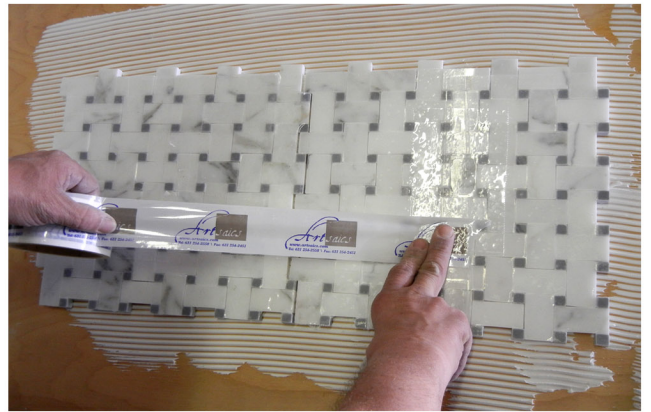

STEP 4: Once down, if any seam is visible, use, 2" plastic tape to bring joints close together.

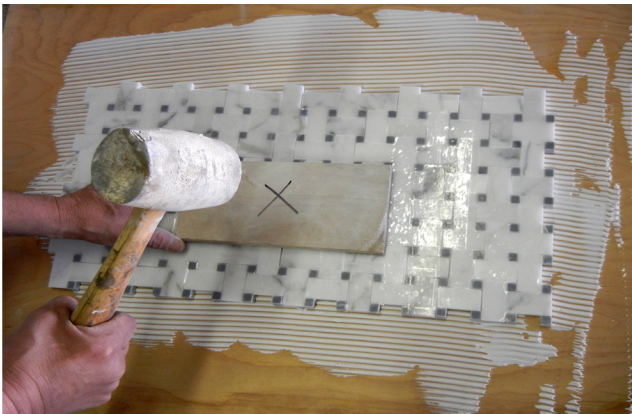

STEP 5: To achieve a uniform surface, tap with moderate force using a wooden beating block and a rubber hammer. **Do not use rubber floats or steel trowels for this.**

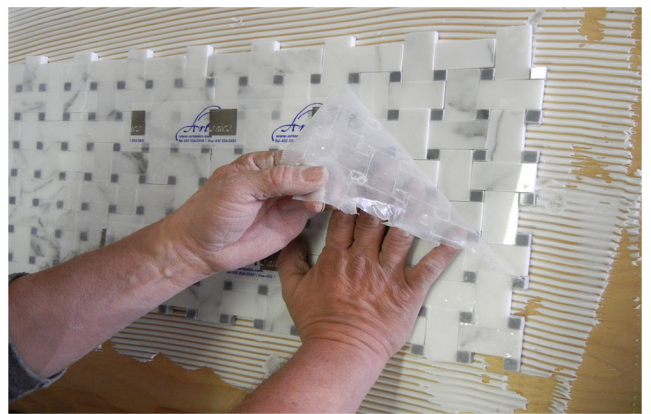

STEP 6: Remove plastic tape after at least 24 hours, depending on ventilation this could take as long as 48 hours. As removing the tape, place loose pieces back into place.